

A decorative vertical bar on the left side of the page, consisting of a long dark blue segment and a shorter light blue segment at the bottom.

PRESIDIUM[®]

PGCG Software (Mac)

Installation Guide

Table of Contents

1. Installing PGCG Software	2
-----------------------------------	---

1. Installing PGCG Software

Step 1: Please read the license agreement in the “license.txt” file.

IMPORTANT:

BY USING THE APPLICATION, YOU ACCEPT THE TERMS AND CONDITIONS OF THIS LICENSE AGREEMENT TO RECEIVE A LICENSE FOR THE ACCOMPANYING SOFTWARE.

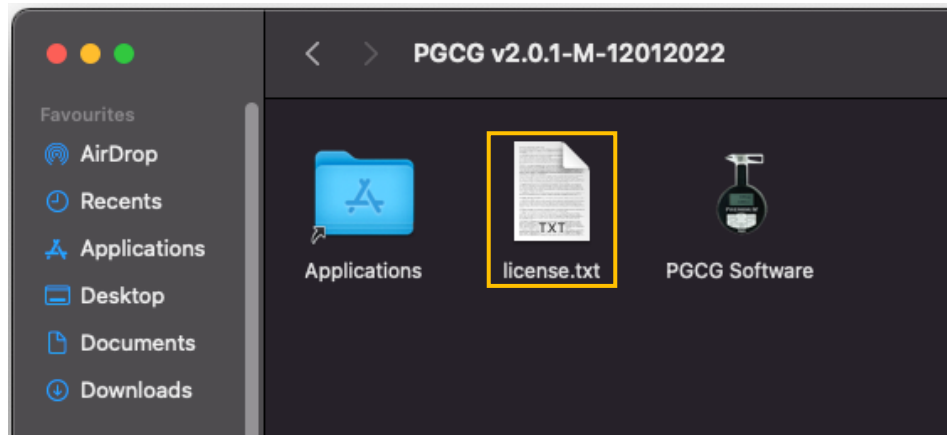


Figure 1

Step 2: Drag and drop the PGCG Software into the “Applications” folder. (Enter your administrator credentials if required)

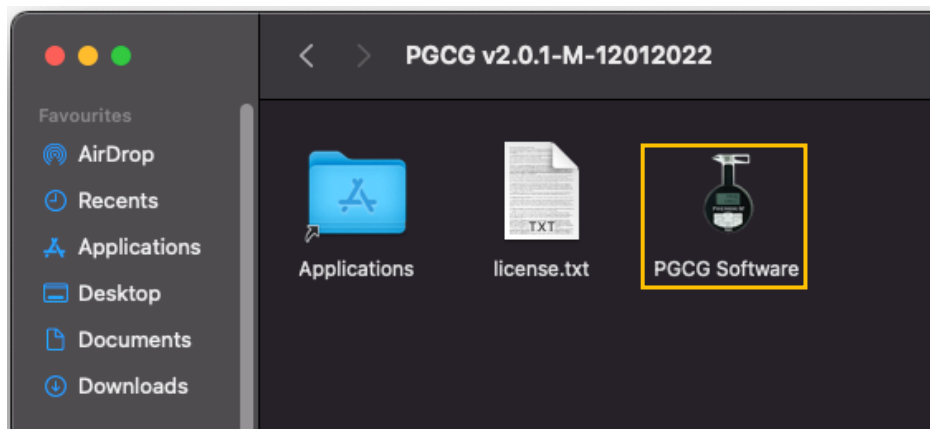


Figure 2

Step 3: Open the PGCG Software in the “Applications” folder.

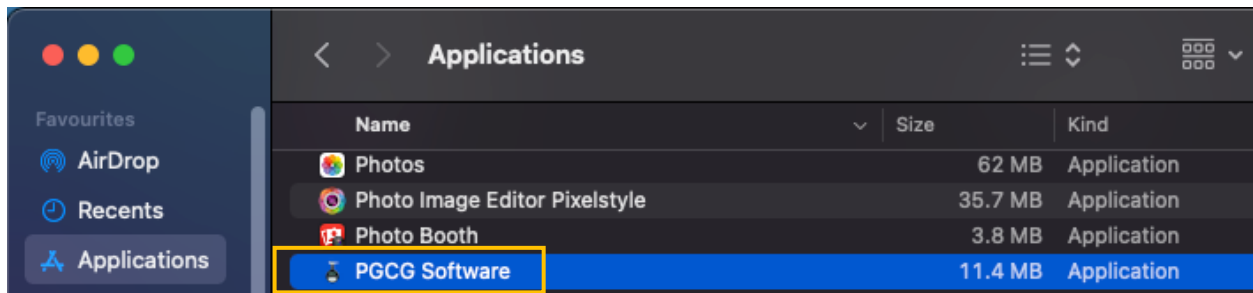


Figure 3

Step 4: Click “OK” when the alert appears.



Figure 4

Step 5: Go to “System Preferences...”



Figure 5

Step 6: Select “Security & Privacy” in System Preferences.



Figure 6

Step 7: Click on the “Open Anyway” to make changes.

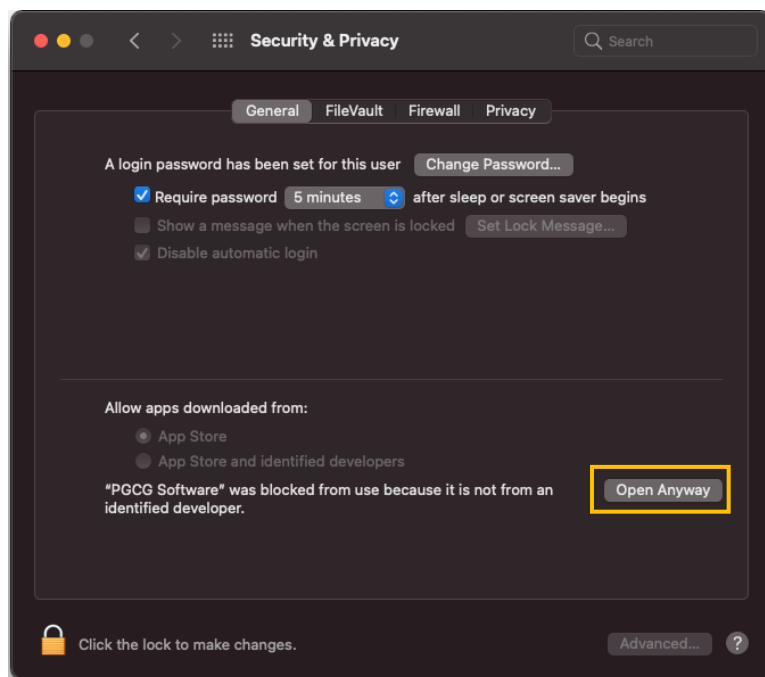


Figure 7

Step 8: Enter your administrator credentials and unlock

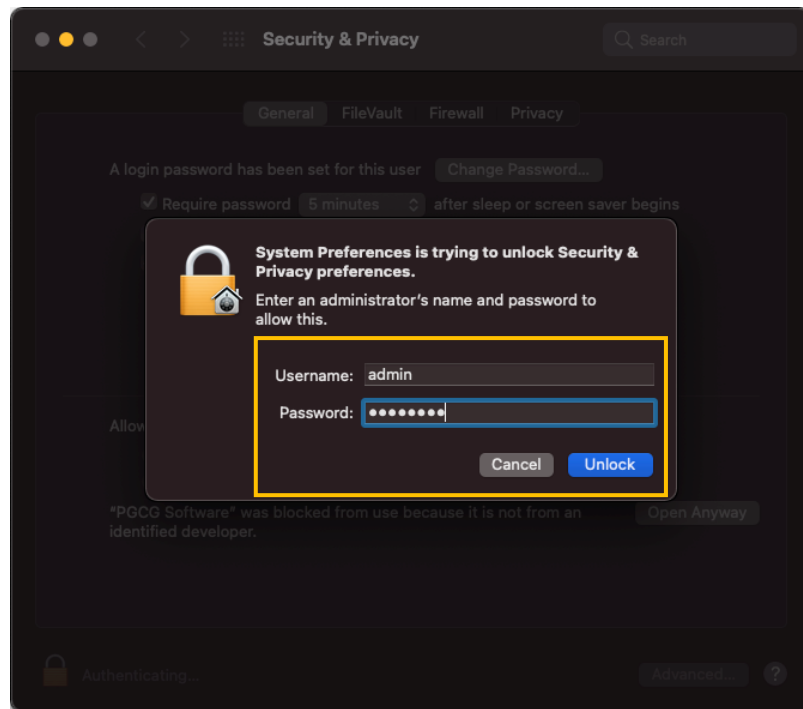


Figure 8

Step 9: Click "Open" when the alert appears.

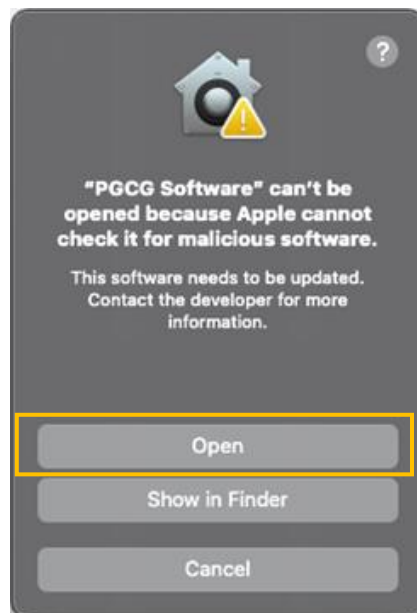


Figure 9

Step 10: Start using the PGCG Software.

Presidium Gem Computer Gauge v2.0.1-M-12012022

Presidium Weight Estimator Gemstone Estimator Dictionary Report Tutorial Contact Us

Device Status ● Disconnected

[Connect](#) [Disconnect](#) [Record](#)

Gemstone Specification [Clear All](#)

Gemstone: Actinolite

Shape: Cushion

Length: mm.

Width: mm.

Depth: mm.

Price/Carat: \$

Weight Calculation

Weight: ct

Price: \$

[Calculate](#)

Measurements **0.00** [Enter](#) [Reset](#)

SHAPE & DIMENSION PREVIEW

Length

Width

Depth

Figure 10

End of Document